

Pro Tip:

We use 1"x2" Lumber, so corners do not need to be trimmed.


Material is 2" x 2" lumber.

Frame can be bolted, nailed, or screwed together.

Cardboard backer should be stapled or screwed to the frame.

Targets are then stapled or taped to the center of the cardboard backer.

The corners of the legs, on the bottom, may have to be trimmed to fit into the target pipes that are set in the ground.

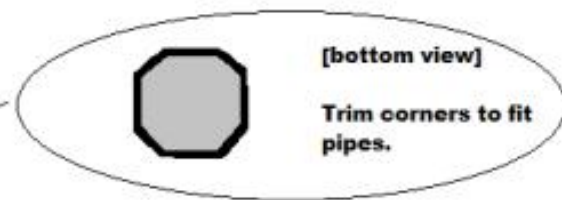

[bottom view]

Trim corners to fit pipes.